
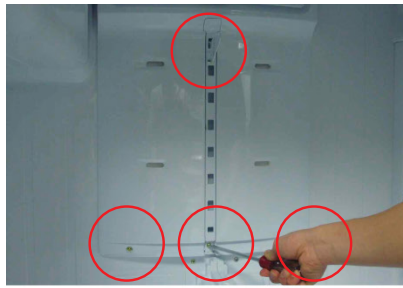
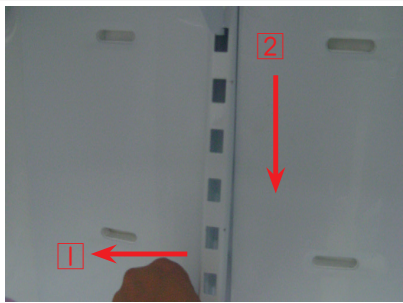

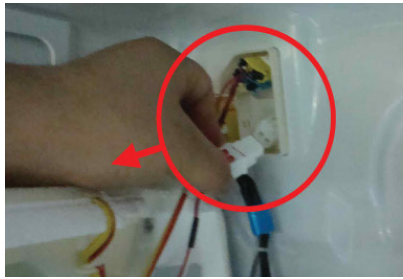
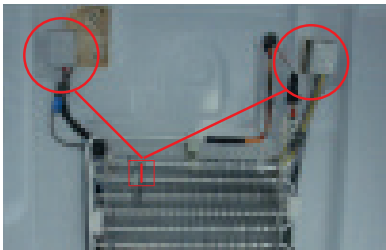


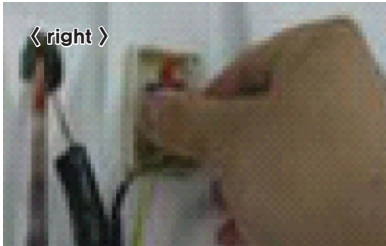


## 3-17) Evaporator Cover In Refrigerator

Part Name	How To Do	Descriptive Picture
<b>Evaporator Cover In Refrigerator</b>	1. Remove the angle cap with a flat-blade screwdriver. (Refer to the picture)  <b>CAUTION</b> Be careful not to scratch or break the parts	
	2. Unscrew 4 screws.	
	3. Remove the the lower part of angle mid by pulling it out and pushing it down. (Refer to the picture)	
	4. Remove the hook by pulling it from the lower part and pushing the cover down. (Refer to the picture)	
	5. Disconnect the 2 housing connectors. (Refer to the picture)  <b>CAUTION</b> Continues a work after confirming that fan operation stops.	

## Disassembly and Reassembly

### 3-18) Evaporator In Refrigerator

Part Name	How To Do	Descriptive Picture
<b>Evaporator In Refrigerator</b>	1. Remove the the housing cover by pushing both lateral sides of the housing cover (□) and pulling it out. (Refer to the picture)	 
	2. Disconnect the housing connector part on left side. (Refer to the picture)	
	3. Disconnect the housing connector on right side.	
	4. Remove the evaporator by lifting the bottom side of it up and pulling it out. (Refer to the picture)	