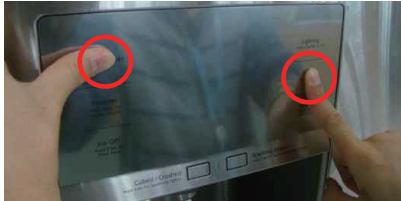
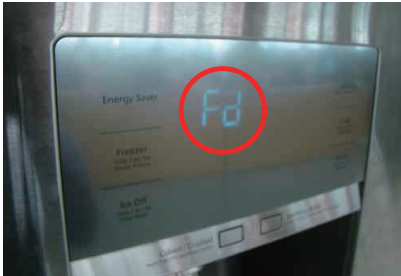

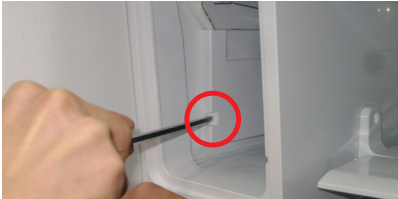

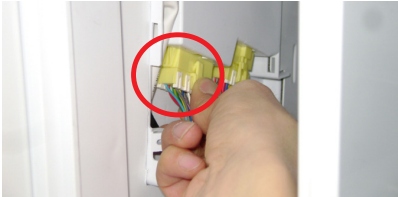

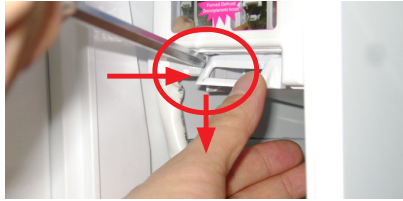
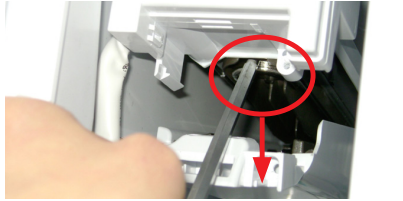
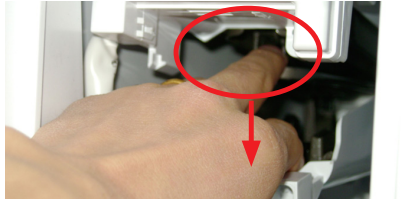

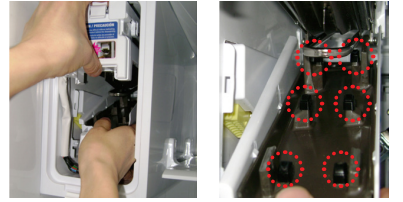


Disassembly and Reassembly

3-22) Ice-Maker

Part Name	How To Do	Descriptive Picture
Ice Maker	1. When pressing the Energy-Saver and the Fridge buttons on the Display together for 8 seconds at the same time, it will convert to the Test Mode and the entire Display function will be off.	
	2. When pressing any button within 15 seconds after it is shifted to the Test Mode, its function will change in the following order. Manual operation1(FF) Manual operation2(OF-r) → manual defrost of fresh food compartments(rd) → manual defrost of fresh and freezer compartments(fd) → cancel(Display all off). • Set unit to Fd for 5 minutes. This will allow for easy removal of the ice maker.	
	3. Lift up the Ice Bucket and pull it out.	
	4. Remove the screw from the Wire Housing Cover.	
	5. Remove the Wire Housing Cover.	
	6. Disconnect the Ice Maker Housing Connector.	

Part Name	How To Do	Descriptive Picture
Ice Maker	7. Remove the screw from the Duct Tray-ice.	
	8. With a flat blade screwdriver, push the duct to the right and remove it from the locking tab. (Refer to the image.)	
	9. With a flat blade screwdriver, pry down on the refrigerant tube to separate it from the bottom of the ice maker. (Refer to the image.)	
	10. Push down the refrigerant pipe slightly and separate the refrigerant pipe and the Ice Maker Assembly completely.	
	11. While pressing the Hook, pull out the Ice Maker.	
	12. While pushing down the Duct-Tray-Ice, pull out the Ice Maker carefully and remove it. ※ When removing the ice maker, be careful not to damage the grommets on the tray or the refrigerant tube. (Refer to the dotted parts on the right side photo.)	
	※ If the ice maker is frozen, it can be melt by using the steam heater.	